


# ELBA

**Model No. : ESVC 3926 GY**  
**2 In 1 Stick Vacuum Cleaner**

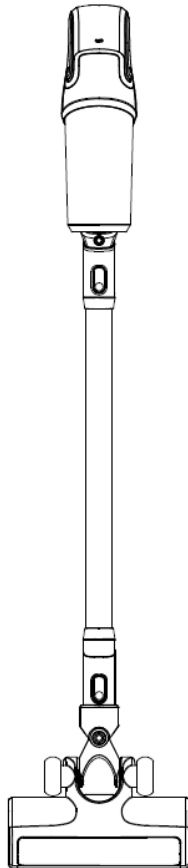

## **INSTRUCTION MANUAL**

Read this manual thoroughly before using and save it for future reference


## **1. IMPORTANCE SAFE GUARDS**

Before using the electrical appliance, the following basic precautions should always be followed:

- 1.1 This appliance is designed for domestic dry vacuum cleaning only. Do not pick up liquids or use on wet surfaces for fear of damage to the appliance.
- 1.2 Never immerse the charger or the appliance into water to avoid any danger.
- 1.3 Keep the appliance and accessories away from hot surfaces like hot gas or microwave-oven.
- 1.4 Do not block the appliance ventilation or hinder air flow so as not to affect its heat dissipation effect.
- 1.5 Do not pick up anything that is flammable, or combustible liquids, such as cigarette butt, matchstick or ashes with residual heat.
- 1.6 Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the charger.
- 1.7 Do not use the appliance if any signs of damage on the charger or power cable.
- 1.8 The appliance can only be powered by the charger provided. Do not use the charger to charge any other appliance.
- 1.9 Ensure the appliance is power off before cleaning to avoid possibility of electric shock.
- 1.10 Repairs should be carried out by authorized service agent in accordance with relevant safety regulations if battery cannot be charged normally; the battery cannot be removed for other purposes.
- 1.11 The battery must be disposed properly and safely in accordance with local regulations; never dispose it in the fire or water as this may increase the risk of explosion or contamination.
- 1.12 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety and understand the hazards involved.
- 1.13 Misuse or use of any other accessories or attachment not provided with the appliance, may present a risk of personal injury.
- 1.14 Do not use the appliance for other purposes.
- 1.15 Do not use the appliance outdoors.

**For Household Use Only**

## 2. PART LIST

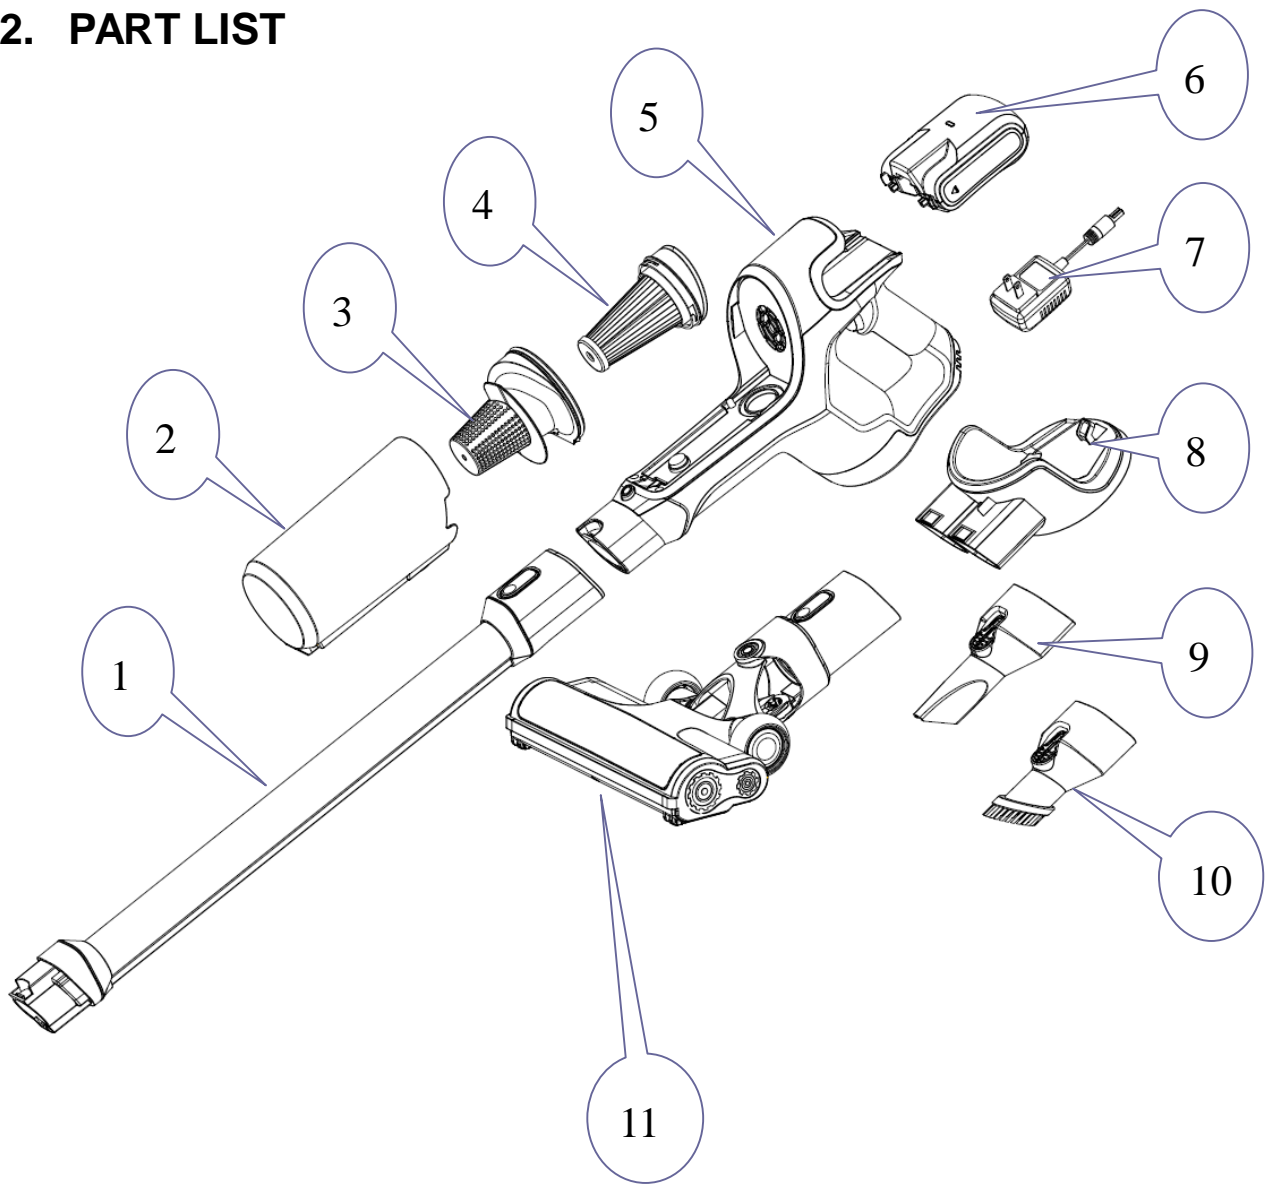

1	Aluminum Tube	7	Charger
2	Dust Container	8	Wall Mount Bracket (Standard)
3	Sand Net Filter	9	Small Crevice Nozzle (Standard)
4	HEPA Filter	10	Small Dust Nozzle (Standard)
5	Main Unit	11	Hard Floor Brush (Standard)
6	Battery Pack		

### 3. INSTALLATION INSTRUCTION

For the convenience of transportation and storage, the main unit, floor brush, aluminum tube assembly and other parts (wall-mount bracket, charger, small dust brush and flat spout) are packed separately in the box. User should follow the steps below for assembling the appliance when first use.

#### 3.1 Aluminum Tube And Floor Brush Assembly

Insert the end of the aluminum tube (No.1) into the floor brush connector (No.12) as shown in figure 3a and lock it into place. When insert correctly, unit release key (A) will click in properly - see figure 3b.

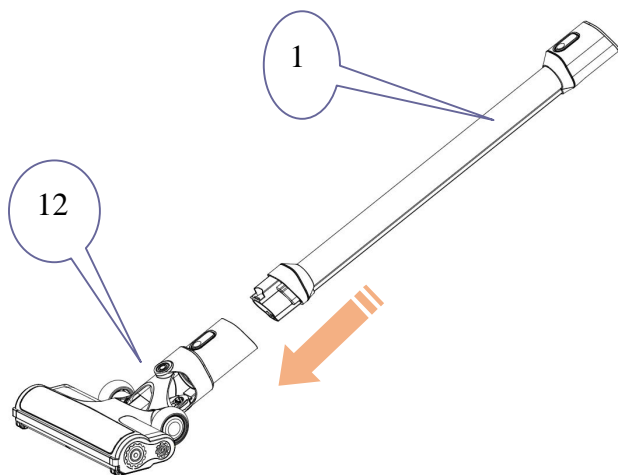


Figure 3a

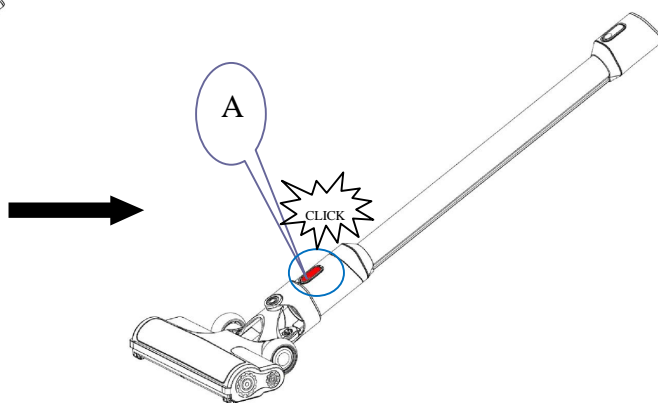


Figure 3b

#### 3.2 Aluminum Tube And Main Unit Assembly

Slot the main unit (No.5) into the air inlet nozzle of aluminum tube (No.1) until the release key (B) clicks in properly. See figure 3c and 3d.

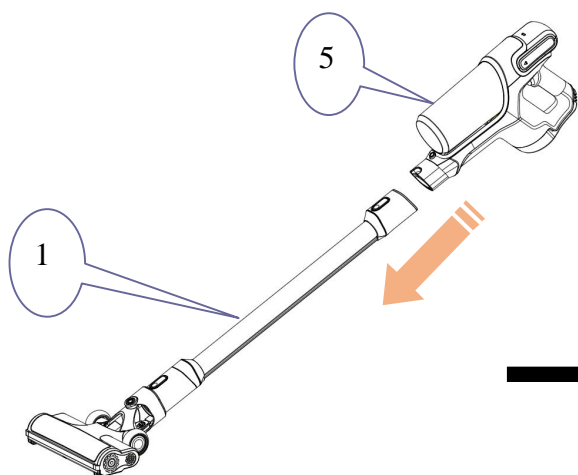


Figure 3c

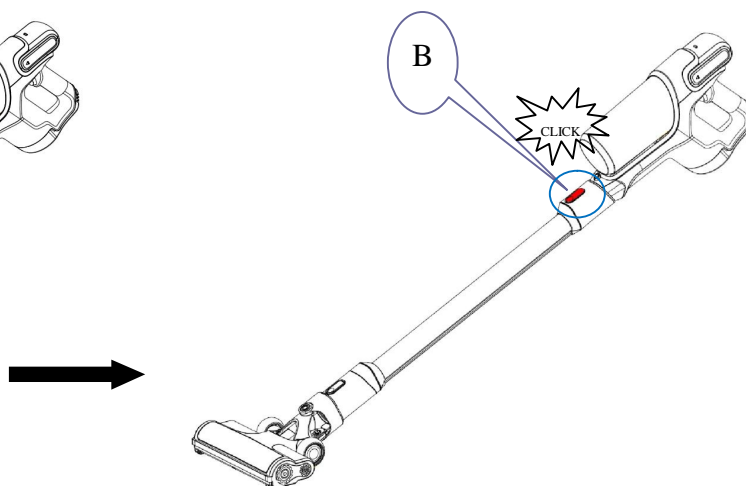


Figure 3d

### 3.3 Wall-mount Bracket Installation

Pin up two self-tapping screws M4\*20 (included) with a distance of 71.5mm in between as shown in figure 3e. Fix the wall bracket (No.8) on the screws properly, see figure 3f. Hang the small crevice nozzle (No. 9) and small dust nozzle (No. 10) on the designated slot as shown in figure 3g.

It is recommended that the bracket to be placed near to a power socket for the ease of charging.

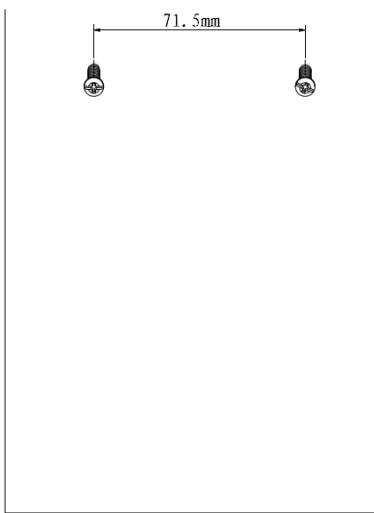


Figure 3e

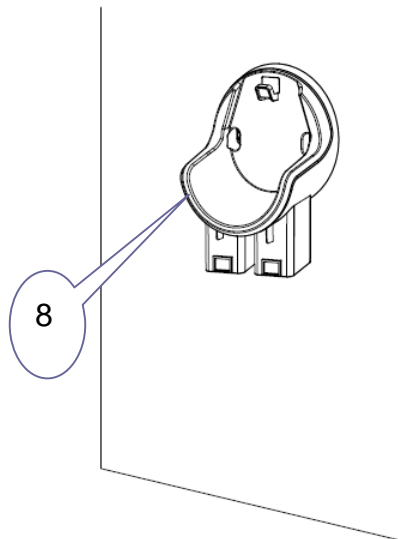


Figure 3f

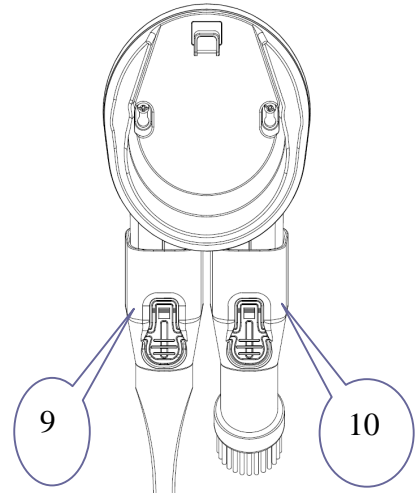


Figure 3g

## 4. OPERATION INSTRUCTION

### 4.1 Whole Unit

Turn on the appliance by pressing the power switch button located at the side of the main unit (Figure 4a). The default power setting is high speed gear. To change the speed to low gear, press the speed control button located at the back of the main unit (Figure 4b). Press again to rotate the power setting.

To turn off the power, press the power switch button.

During operation, please pay attention to the battery capacity light shown in Figure 4c. Blue light indicates the battery is fully charged. The light will turn to flashing orange light if the battery power is low when using and eventually the light will go off when the battery is fully depleted and the appliance will stop working automatically.

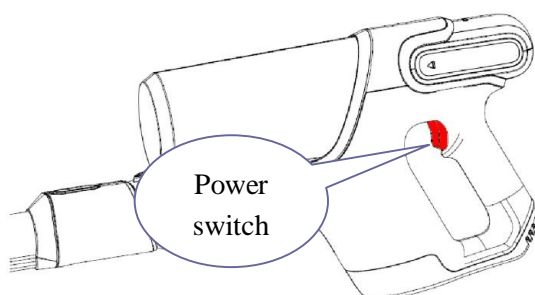


Figure 4a

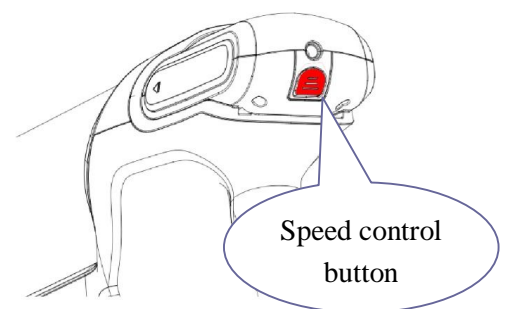


Figure 4b

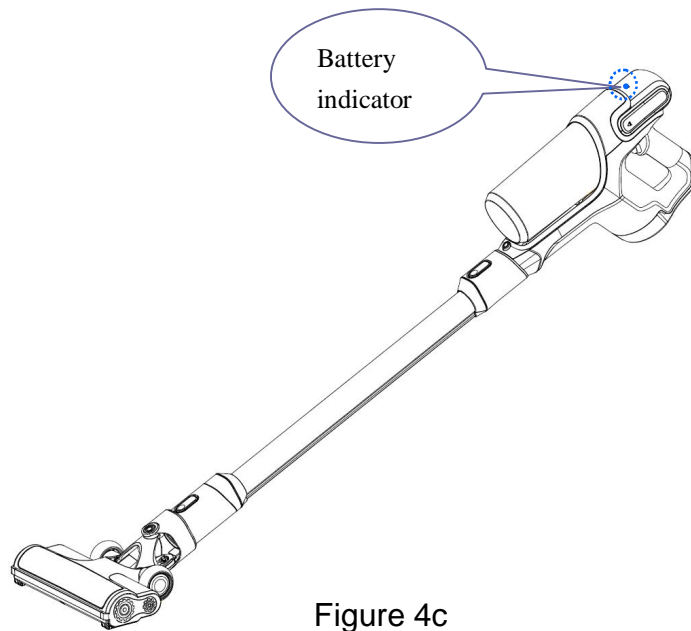


Figure 4c

#### 4.2 Main Unit (Handheld Unit)

Press the release key button (B) to detach the main unit from the aluminum tube, see figure 4d. Press the power switch button to switch on the handheld unit. The operation will be the same as operating the whole unit (refer to Point 4.1).

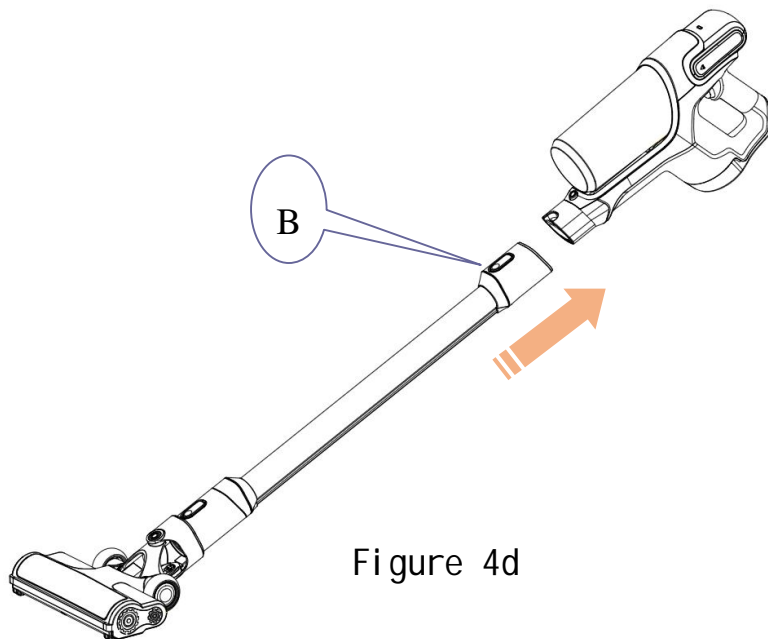


Figure 4d





### 4.3 Small Crevice Nozzle and Small Dust Nozzle

The small crevice nozzle (No.9) is for cleaning the corners of the wall or confined gap while the small dust nozzle (No.10) is mainly for stubborn stains or dust in surface. Both accessories are applicable to use on the main unit or aluminum tube.

To use the small crevice nozzle, see Figure 4e and 4f.

To use the small dust nozzle, see Figure 4g and 4h.

To detach the accessories, press the release button (A) and pull out the nozzles.

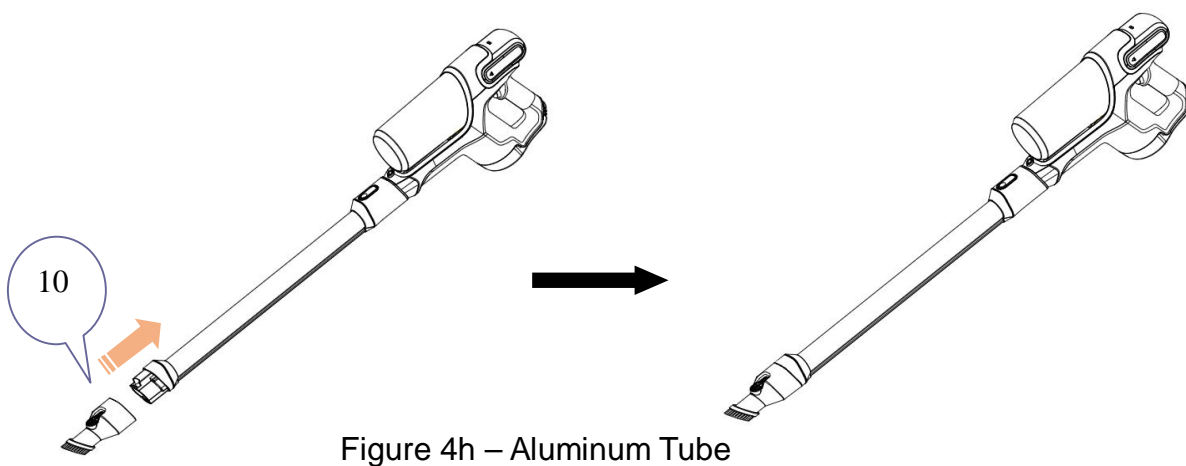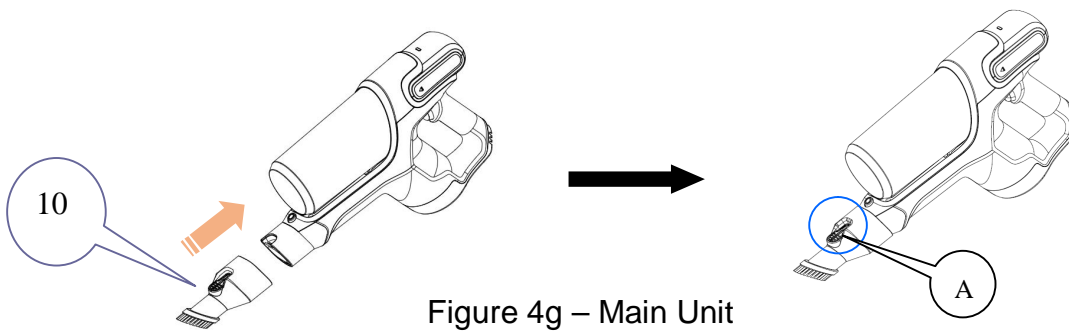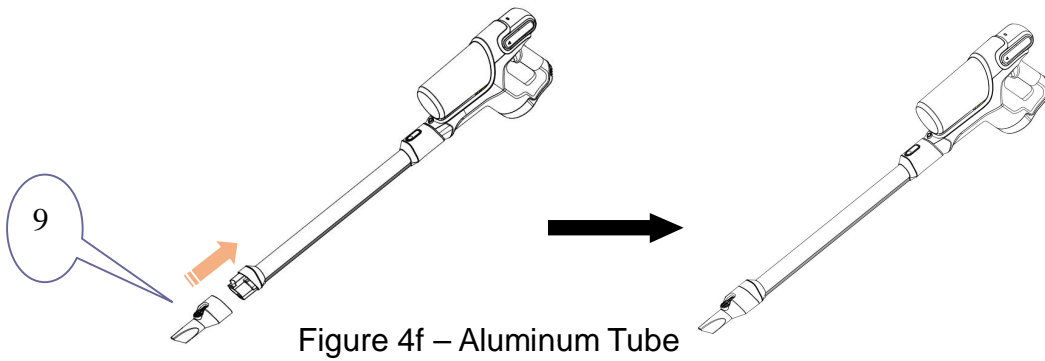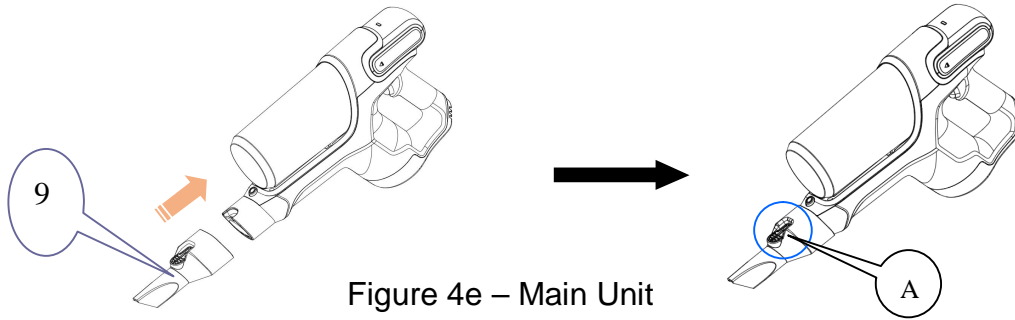

## 5. BATTERY PACK

There are 2 ways to charge the battery pack – Hang the unit on the wall-mount bracket if the bracket is near to power socket (Figure 5a) or take out the battery pack and charge directly using the charging cable(Figure 5b). Either way, plug the charging cable into the connection point at the back of the battery to start charging.

During charging, the power indicator will show blue light flashing slowly. The power indicator will turn to green color for one minute after the battery is fully charged before the light goes off. Charging time is 4 to 6 hours.

To release the battery from the slot, press the release button (A) (Figure 5b) at both sides of the battery and pull the battery out. After battery is fully charged, insert the battery into the designated slot by means of the guide rail and click it into the place.

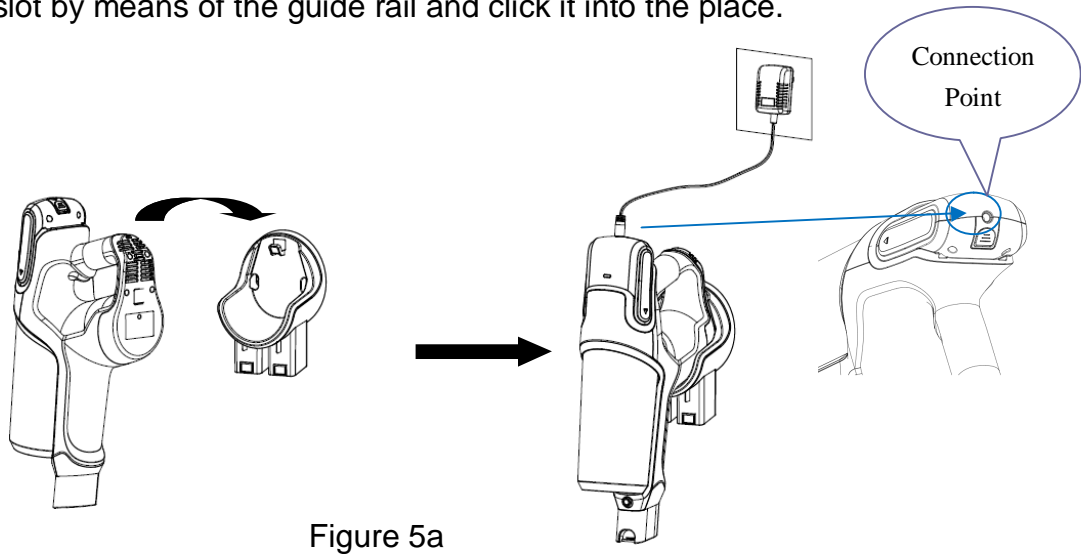


Figure 5a

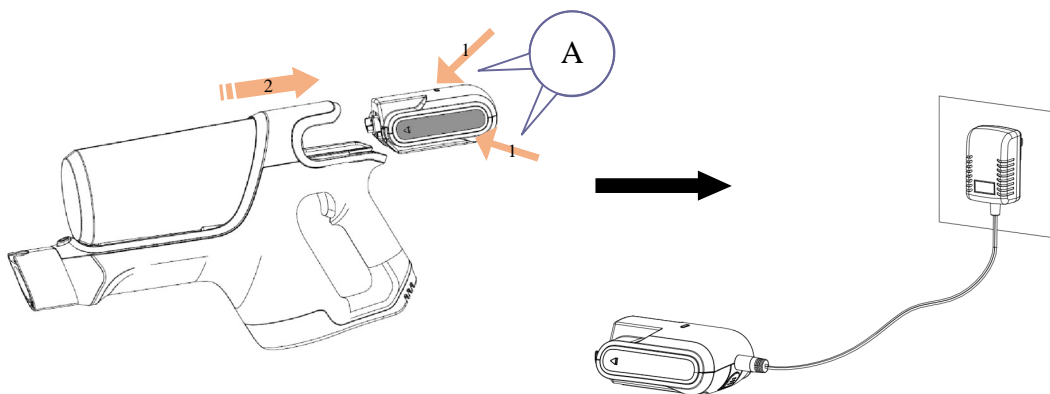


Figure 5b

**Attention: The machine is unable to start when charging.**



## 6. RUNTIME

The lifespan for Li-on battery is subject to natural wear. Thus, the battery capacity and the runtime will decrease over a period of times. This is normal aging process and does not indicate faulty or defect on the product.

	Run Time
High Gear	Up to 17 min
Low Gear	Up to 45 min

## 7. CLEANING & MAINTENANCE

Always switch off the appliance after finished vacuuming and empty the dust container after every use whenever is possible. Try not to fill the dust container to the max as this may lead to filter clogging.

### 7.1 Emptying Dust Container

Press the dust container release button (A) and pull out the dust container from main unit as indicated in Figure 7a.

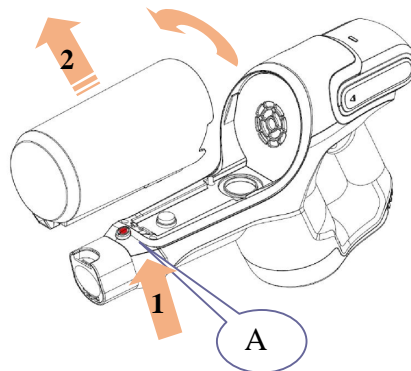


Figure 7a

Take the sand net filter unit out from the dust container by pulling and empty the dust container – Figure 7b. Wash the dust container if necessary under a running tap and wipe it dry thoroughly before putting it back to the main unit.

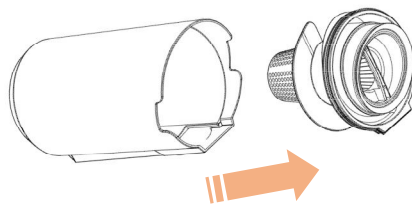


Figure 7b

### 7.2 Filter Cleaning

The filters should be cleaned regularly so as to ensure the appliance can operate optimally.

The clean the HEPA filter, turn the knob counter-clockwise to take it out from sand net filter (Figure 7c) and then empty the dirt. You may tap the dirt out from the filter and if the filter is particularly dirty, you may wash the filters gently under a running tap and let it dry thoroughly before putting it back to the dust container. .


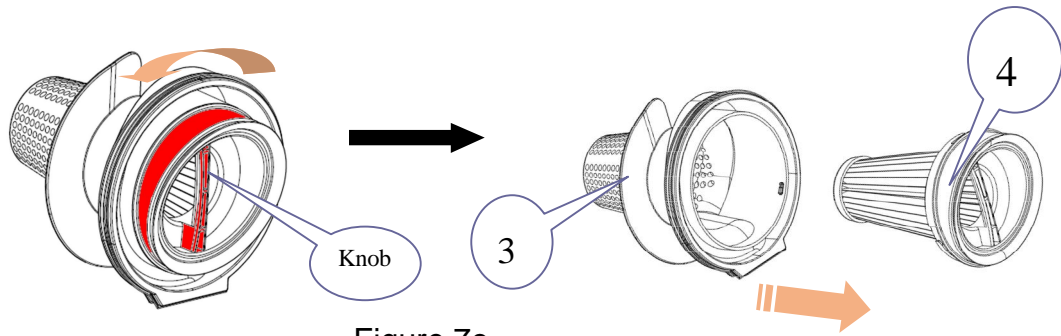


Figure 7c

### 7.3 Assembling Filters

After cleaning, insert the HEPA filter back to the sand net filter and lock it in place by turning the knob clockwise.

Put the sand net filter unit into the dust container and ensure that the filter unit is correctly fitted (Figure 7d). Insert the dust container to the appliance – tilt the dust container and let the front part of the container fit in to the slot first (Figure 7e). When the dust container is properly fitted to the appliance, there will be a “click” sound.

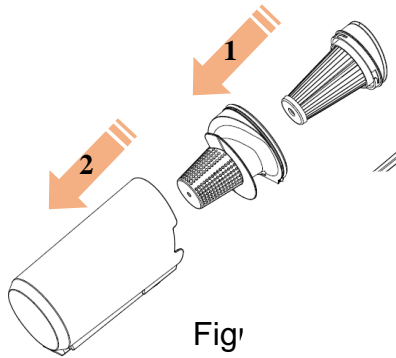

Fig

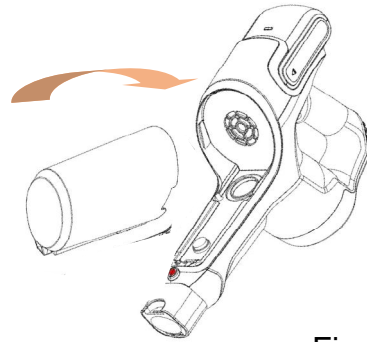


Figure 7e

### 7.4 Floor Brush Cleaning

Before carrying out any cleaning or maintenance, switch off the appliance and then remove the battery from the slot.

Press and hold the brush release button (A), pull the lever at the side and pull out the brush roller from the slot (Figure 7f). Wash the filters gently under a running tap and let it dry thoroughly before putting it back - put the brush roller back by sliding it to the slot and then lock the lever.

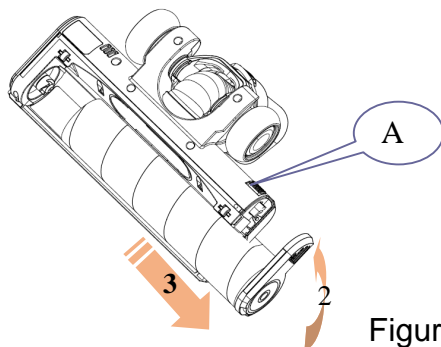


Figure 7f


**NOTE: THE BRUSH ROLLER MUST BE FITTED IN ORDER TO USE THE FLOOR BRUSH**

**Product Care:** please be advised that you may clean the dust cup after using every time; Wash or replace it if too much dust or blockage; remove hair from the brush bar if jams and keep it tangle-free after use in a long time so that the vacuum cleaner work more efficiently.

## 8. TECHNICAL SPECIFICATION

Product Model	ESVC 3926 GY
Working Voltage	DC 21.6V
Rated Power	130W
Battery Charger Model	ESVC 3926 GY
Battery Charger Input	100-240V/50/60Hz
Battery Charger Output	27V /500mA
Electrical Brush Rated Power	40W
Charging Period	4—6 hrs

## ENVIRONMENT-FRIENDLY DIPOSAL

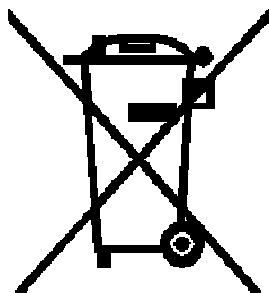

You can help protect the environment!  
Please remember to respect the local regulations:  
Hand in the non-working electrical equipment to  
an appropriate waste disposal centre.

***The manufacturer and agent decline all responsibilities in the event of damage caused by improper, incorrect or illogical use of the appliance.***

**Contact after sales service center when in doubt of the condition of the appliance.**

**For after sales service [Singapore], please contact**

**Casa (S) Pte Ltd  
15 Kian Teck Crescent, Singapore 628884  
Telephone: +65 6268 0077  
Fax: +65 6898 0510  
Email: [service@casa.com.sg](mailto:service@casa.com.sg)**